

VT180

SERIES

TECHNICAL MANUAL

© Digital Equipment Corporation 1983.

All Rights Reserved.

Printed in U.S.A.

The material in this manual is for informational purposes and is subject to change without notice.

Digital Equipment Corporation assumes no responsibility for any errors that may appear in this manual.

CP/M[®] is a registered trademark of Digital Research Inc.

Mylar[™] is a trademark of DuPont de Nemours & Company, Inc.

WordStar[®] is a registered trademark of MicroPro, Inc.

Z80[®] is a registered trademark of Zilog, Inc.

The manuscript for this book was created on a DIGITAL Word Processing System and, via a translation program, was automatically typeset on DIGITAL's DECset Integrated Publishing System. Book production was done by Educational Services Development and Publishing in Marlboro, MA.

The following are trademarks of Digital Equipment Corporation:

digital	MASSBUS	TOPS-20
DEC	PDP	UNIBUS
DECmate	P/OS	VAX
DECsystem-10	Professional	VMS
DECSYSTEM-20	Rainbow	VT
DECUS	RSTS	Work Processor
DECwriter	RSX	
DIBOL	TOPS-10	

CONTENTS

PREFACE

CHAPTER 1 INTRODUCTION AND SPECIFICATIONS

1.1	GENERAL DESCRIPTION	1-1
1.2	PHYSICAL DESCRIPTION	1-1
1.3	VT180 SPECIFICATIONS.....	1-3
1.3.1	System Physical Dimensions.....	1-3
1.3.2	Unit Physical Dimensions.....	1-3
1.3.3	Environmental Specifications	1-4
1.3.4	Electrical Specifications.....	1-4
1.4	VIDEO DISPLAY CHARACTERISTICS	1-4
1.5	KEYBOARD.....	1-5
1.6	AUDIBLE SIGNALS.....	1-5
1.7	COMMUNICATION CHARACTERISTICS.....	1-5
1.8	DISK DRIVE CHARACTERISTICS	1-6
1.9	RELATED DOCUMENTATION	1-7
1.9.1	Digital Hardware and Software Documentation.....	1-7
1.9.2	Other Documentation	1-7

CHAPTER 2 OPERATING INFORMATION

2.1	INTRODUCTION.....	2-1
2.2	TERMINAL OPERATION	2-1
2.3	CONTROLS AND INDICATORS	2-1
2.3.1	Terminal Monitor and Disk Drive Power Controls.....	2-3
2.3.2	Keyboard Controls	2-4
2.3.2.1	Standard Keys.....	2-4
2.3.2.2	Function Keys	2-5
2.3.2.3	Set-Up Keys.....	2-7
2.3.2.4	Auxiliary Keypad Keys	2-8
2.4	VISUAL INDICATORS	2-9
2.4.1	ON-LINE	2-9
2.4.2	LOCAL	2-9
2.4.3	KBD LOCKED	2-9
2.4.4	L1 through L4 Indicators	2-10
2.5	AUDIBLE INDICATORS.....	2-10
2.5.1	Keyclick	2-10
2.5.2	Bell Tone	2-10
2.6	SET-UP MODE	2-10
2.6.1	Entering and Exiting Set-Up	2-10
2.6.2	Set-Up Feature Types.....	2-13
2.6.2.1	Operator Preference Features.....	2-13
2.6.2.2	Communication Compatibility Features.....	2-13
2.6.2.3	Installation Features	2-14
2.6.3	Set-Up Feature Selection	2-14
2.6.4	Restoring and Saving Set-Up Features.....	2-15
2.6.4.1	Restore	2-15
2.6.4.2	Save	2-15
2.6.4.3	Reset	2-15

CONTENTS (Cont)

2.6.5	Set-Up Features	2-16
2.6.5.1	General Set-Up Features	2-16
2.6.5.2	SET-UP A Features	2-17
2.6.5.3	SET-UP B	2-17
2.6.5.4	SET-UP B, User Preference Features	2-19
2.6.5.5	SET-UP B, CP/M Compatibility Features	2-21
2.6.5.6	SET-UP B, Host Computer Compatibility	2-23
2.6.5.7	SET-UP B, Answerback Message	2-24

CHAPTER 3 INSTALLATION AND INTERFACE INFORMATION

3.1	GENERAL.....	3-1
3.2	SITE CONSIDERATIONS.....	3-1
3.3	UNPACKING AND INSPECTION	3-3
3.4	VT18X UPGRADE KIT INSTALLATION.....	3-4
3.4.1	Check the ROMs on the Terminal Controller Module.....	3-5
3.4.2	Install the VT180 Paddle Board.....	3-9
3.4.3	Install the Expansion Backplane on the Card Cage.....	3-10
3.4.4	Install the Card Guides	3-15
3.4.5	Install the RF Shield	3-16
3.4.6	Install the Terminal Controller Module	3-17
3.4.7	Install the VT18X Control Module	3-17
3.4.8	Install the Chassis in the Bottom Cover	3-19
3.4.9	Install the VT180 Logo.....	3-19
3.4.10	Install the Top Cover	3-20
3.4.11	Install the New Metal Module Access Cover (Rear Shield).....	3-20
3.4.12	Checking the RX180 Drive Select Switches	3-21
3.4.12.1	Disk Drive Unit Top Cover Removal	3-22
3.4.12.2	Setting the Drive Select Switches.....	3-22
3.4.12.3	Terminator Resistor Pack.....	3-23
3.4.12.4	Disk Drive Unit Top Cover (Reinstallation).....	3-24
3.4.13	ROM Removal and Installation.....	3-24
3.4.14	Word Processing Option	3-25
3.5	SYSTEM INTERCONNECTIONS	3-26
3.5.1	Terminal Installation	3-26
3.5.2	Install the RX180 Disk Drive Unit(s).....	3-27
3.5.3	Serial Port Connections	3-29
3.5.3.1	Printer Port.....	3-29
3.5.3.2	Communications Port	3-31
3.5.3.3	General Purpose Port	3-31
3.6	POWER-UP PROCEDURE.....	3-31
3.6.1	Self-Test Error Messages	3-32
3.7	SYSTEM CHECKOUT.....	3-33
3.7.1	ROM-Based Diagnostic	3-33
3.7.2	VT18X Diskette Diagnostic.....	3-33
3.7.3	Hardware Installation Complete.....	3-33
3.8	INTERFACE INFORMATION.....	3-34
3.8.1	Communications Interface Connector.....	3-34
3.8.2	Printer Interface Connector	3-34
3.8.3	General Purpose Serial Interface Connector	3-36
3.8.4	RX180 Disk Port Connector	3-36

CONTENTS (Cont)

3.8.5	External Video Connections	3-36
3.8.5.1	Composite Video Output Connector (J9).....	3-38
3.8.5.2	Video Input Connector (J8).....	3-38

CHAPTER 4 VT180 CP/M OPERATION

4.1	CP/M INTRODUCTION	4-1
4.2	DISKETTES AND FILES.....	4-1
4.2.1	Storing Information on Diskettes.....	4-1
4.2.2	Using Diskettes.....	4-1
4.3	LOADING CP/M INTO VT180 MEMORY.....	4-2
4.4	ENDING AN OPERATING SESSION.....	4-6
4.5	COPYING THE CP/M MASTER DISKETTE.....	4-6
4.6	USING THE VT180	4-9
4.7	CONVERSING WITH CP/M.....	4-10
4.8	ISSUING COMMANDS.....	4-10
4.9	RESIDENT AND TRANSIENT CP/M COMMANDS	4-10
4.10	RUNNING APPLICATION PROGRAMS.....	4-11

CHAPTER 5 SETTING THE SERIAL PORTS' TRANSMISSION CHARACTERISTICS

5.1	INTRODUCTION	5-1
5.2	PSETUP	5-1
5.2.1	Menu Mode	5-2
5.2.1.1	Baud Rate Selection	5-2
5.2.1.2	Communications Port Data/Stop Bits/Parity	5-2
5.2.1.3	General Purpose Port Data/Stop Bits/Parity.....	5-3
5.2.1.4	Printer Port Data/Stop Bits/Parity.....	5-3
5.2.1.5	Show All Selections Made.....	5-3
5.2.1.6	Set Parameters to Default Selections	5-3
5.2.1.7	Return to CP/M	5-3
5.2.2	Concise Mode	5-3
5.3	PSETUP EXAMPLES.....	5-3
5.3.1	Menu Mode	5-3
5.3.2	Concise Mode	5-6
5.4	PSETUP ERROR MESSAGES.....	5-7

CHAPTER 6 TECHNICAL DESCRIPTION

6.1	INTRODUCTION	6-1
6.2	SYSTEM DESCRIPTION	6-1
6.2.1	System Subunits.....	6-1
6.2.1.1	Terminal Controller Module.....	6-2
6.2.1.2	Advanced Video Option (AVO).....	6-3
6.2.1.3	Video Monitor.....	6-3
6.2.1.4	VT180 Power Supply.....	6-3
6.2.1.5	Keyboard.....	6-3
6.2.1.6	VT18X Control Module.....	6-3
6.2.2	VT100 and VT18X Control Module Interconnection	6-4
6.2.3	VT180 Paddle Board	6-4
6.2.4	RX180 Disk Drive Unit.....	6-4

CONTENTS (Cont)

6.3	VT100 FUNCTIONAL DESCRIPTION	6-5
6.3.1	Microprocessor.....	6-5
6.3.2	Program ROM.....	6-6
6.3.3	Scratch RAM	6-6
6.3.4	Nonvolatile RAM	6-6
6.3.5	Advanced Video Option.....	6-6
6.3.6	Keyboard.....	6-6
6.3.7	LEDs.....	6-6
6.3.8	Keyboard Translator	6-6
6.3.9	Transmit Buffer	6-6
6.3.10	Communication Transmitter	6-6
6.3.11	Communication Receiver.....	6-7
6.3.12	Silo.....	6-7
6.3.13	Control Function Parser.....	6-7
6.3.14	Screen RAM.....	6-7
6.3.15	Video Processor.....	6-7
6.3.16	CRT Monitor.....	6-8
6.3.17	Power Supply.....	6-8
6.3.18	Standard Terminal Port.....	6-8
6.3.19	EIA Drivers and Receivers.....	6-8
6.4	FIRMWARE INTRODUCTION	6-8
6.5	TERMINAL CONTROLLER DESCRIPTION.....	6-10
6.5.1	8080 Microprocessor	6-10
6.5.2	Data Bus and System Controller	6-12
6.5.3	Clock Generator.....	6-14
6.5.4	Bus Timing.....	6-14
6.5.5	Microprocessor Memory	6-15
6.5.5.1	Memory Map	6-17
6.5.5.2	Memory Devices	6-17
6.5.5.3	ROM Decoding.....	6-17
6.5.5.4	RAM Decoding.....	6-17
6.5.5.5	Memory Disable.....	6-18
6.5.6	I/O Decoding.....	6-18
6.5.6.1	PUSART Read and Write	6-18
6.5.6.2	I/O Read and Write	6-18
6.5.7	Interrupt Vector.....	6-19
6.5.8	Communication Transceiver	6-20
6.5.8.1	Data Transmission.....	6-20
6.5.8.2	Data Reception	6-20
6.5.8.3	PUSART Programming	6-22
6.5.9	Standard Terminal Port	6-24
6.5.10	Nonvolatile RAM	6-25
6.5.10.1	NVR Control.....	6-25
6.5.10.2	Microprocessor Management	6-25
6.5.10.3	NVR Timing.....	6-26
6.5.11	Keyboard Interface	6-26
6.5.12	Video Processor.....	6-27
6.5.12.1	Timing Chip Description.....	6-30
6.5.12.2	Control Chip Description	6-38
6.5.12.3	Address Counter and Data Structure in RAM	6-43
6.5.12.4	Address Latch Buffer.....	6-44

CONTENTS (Cont)

6.5.12.5	Line Buffer	6-44
6.5.12.6	Character Generator	6-44
6.5.12.7	Video Shift Register	6-45
6.5.12.8	Terminator	6-46
6.5.12.9	DMA Cycle Timing Diagram.....	6-47
6.5.12.10	Video Blanking.....	6-49
6.5.12.11	Video Input and Output	6-49
6.5.12.12	Intensity Control	6-49
6.5.13	Microprocessor – Video Processor Interface	6-50
6.5.13.1	Screen Memory Organization	6-50
6.5.13.2	Line Organization.....	6-51
6.5.13.3	Scrolling Region.....	6-52
6.5.13.4	Cursor	6-52
6.5.13.5	Set-Up.....	6-53
6.6	VT18X CONTROL MODULE DESCRIPTION	6-53
6.6.1	Z80A CPU.....	6-54
6.6.2	Interrupts.....	6-56
6.6.3	64K Byte RAM	6-58
6.6.4	8K Byte ROM	6-59
6.6.5	Console Port.....	6-60
6.6.6	Communications Port.....	6-62
6.6.7	Printer Port.....	6-64
6.6.8	General Purpose Serial Port	6-65
6.6.9	Terminal Controller and VT18X Control Module Interconnections.....	6-65
6.6.10	Disk Drive Controller.....	6-67
6.6.10.1	Disk Drive Controller Functional Description	6-67
6.6.10.2	Formatter/Controller	6-67
6.6.10.3	Phase-Locked Loop	6-73
6.6.10.4	Disk Drive Controller Registers	6-76
6.6.10.5	Disk Drive Controller Latches	6-77
6.6.10.6	Disk Drive Interface Connector	6-77
6.6.11	VT18X Control Module Input/Output Addresses.....	6-78
6.6.12	Communications Data and Control Status Registers	6-79
6.6.12.1	Asynchronous Mode Instruction Format (41H, 49H, 51H, 59H) WO	6-79
6.6.12.2	Synchronous Mode Instruction Format (59H) WO.....	6-81
6.6.12.3	Command Instruction Registers (41H, 49H, 51H, 59H) WO.....	6-82
6.6.12.4	Status Read Registers (41H, 49H, 51H, 59H) RO	6-83
6.6.12.5	Transmit Data Buffer Register (40H, 48H, 50H, 58H) WO	6-84
6.6.12.6	Received Data Buffer Register (40H, 48H, 50H, 58H) RO	6-85
6.6.13	Disk Drive Controller Registers.....	6-85
6.6.13.1	Command Register (Write-Only).....	6-85
6.6.13.2	Status Register (Read-Only).....	6-89
6.6.13.3	Track Register (Read/Write).....	6-93
6.6.13.4	Sector Register (Read/Write)	6-93
6.6.13.5	Data Register (Read/Write)	6-93
6.6.14	Disk Drive Command Summary.....	6-93
6.6.14.1	Type I Commands	6-93
6.6.14.2	Type II Commands.....	6-93
6.6.14.3	Type III Commands.....	6-94
6.6.14.4	Type IV Command	6-94

CONTENTS (Cont)

6.6.15	General Control and Status Register (80H)	6-94
6.6.16	Communications Status Register (88H)	6-96
6.6.17	Communications Control/Baud Rate Select Register (90H)	6-97
6.6.18	Interrupt and INIT Reset Register (90H).....	6-98
6.6.19	Diagnostic Write Register (98H).....	6-98
6.6.20	Diagnostic Read Register (A0H)	6-99
6.7	VT180 PADDLE BOARD DESCRIPTION	6-100
6.8	VT100 MONITOR	6-102
6.8.1	Elston Monitor Board Description (Digital part number 30-16080).....	6-102
6.8.1.1	Video Driver	6-102
6.8.1.2	Brightness.....	6-102
6.8.1.3	Vertical Oscillator	6-102
6.8.1.4	Self-Oscillation.....	6-102
6.8.1.5	Vertical Output	6-103
6.8.1.6	Linearization.....	6-103
6.8.1.7	Horizontal Driver	6-103
6.8.1.8	Horizontal Deflection Operation.....	6-103
6.8.1.9	Horizontal Output Circuit.....	6-106
6.8.1.10	High Voltage and Focus.....	6-106
6.9	POWER SUPPLY	6-106
6.9.1	Power Input.....	6-106
6.9.2	Start-Up Circuit.....	6-107
6.9.3	Control Circuit.....	6-107
6.9.4	Outputs	6-109
6.9.5	Power Supply Specifications	6-110
6.9.5.1	Input Specifications	6-110
6.9.5.2	Cooling.....	6-114
6.10	KEYBOARD DESCRIPTION	6-114
6.10.1	Keyboard Block Diagram	6-114
6.10.2	Keyboard UARTs.....	6-114
6.10.3	Keyboard Status Byte.....	6-115
6.10.4	Key Address Counter	6-116
6.10.5	Key Scanning and Address Formation	6-117
6.10.6	Bidirectional Interface Operation.....	6-119
6.10.6.1	Interface Line.....	6-119
6.10.6.2	Receiving Side.....	6-119
6.10.6.3	Terminal Data Encoding.....	6-120
6.10.6.4	Combined Interface Signal.....	6-121
6.10.6.5	Decoding of Data from Terminal	6-121
6.10.6.6	Keyboard Output	6-122
6.10.7	Bell.....	6-123
6.10.8	Keyboard Interrupt Routine.....	6-123
6.10.9	Logical Keyboard Processor	6-124
6.10.9.1	Key Recognition.....	6-124
6.10.9.2	Key Rollover	6-124
6.10.9.3	Generation of Codes.....	6-125
6.10.9.4	Keyboard Transmit Buffer	6-126
6.10.9.5	Auto Repeat	6-126

CONTENTS (Cont)

CHAPTER 7 SERVICE INFORMATION

7.1	INTRODUCTION	7-1
7.2	TESTING THE VT180 USING ROM DIAGNOSTICS.....	7-1
7.2.1	Error Messages and Codes	7-1
7.2.2	Power-Up Test	7-3
7.2.3	Keyboard Tests	7-6
7.2.4	CPU, Dynamic RAM, Communication UART, and Disk Drive Controller Tests.....	7-6
7.2.5	Set-Up Screen Test.....	7-6
7.2.6	Video Adjust Test	7-7
7.3	MODULE CONFIGURATIONS	7-8
7.3.1	VT18X Control Module Configuration	7-8
7.3.2	Terminal Controller Module ROMs.....	7-9
7.3.3	Advanced Video Option Configuration	7-9
7.4	DISKETTE DIAGNOSTICS.....	7-9
7.4.1	Diagnostic Operation	7-10
7.4.1.1	Basic Test Operation.....	7-10
7.4.1.2	Extended Test Operation.....	7-14
7.4.1.3	Individual Diagnostics.....	7-14
7.4.1.4	Individual Test Example Dialog.....	7-16
7.4.2	Floppy Test.....	7-17
7.4.2.1	Floppy Test Operation	7-17
7.4.2.2	Floppy Test Description.....	7-18
7.4.3	RAM Test	7-19
7.4.4	Communications Tests.....	7-20
7.4.4.1	Basic Communications Test	7-20
7.4.4.2	Synchronous Communications Test	7-20
7.4.4.3	Loopback Plug Tests.....	7-21
7.4.4.4	Printer Confidence Tests.....	7-21
7.4.5	Diskette-Based Diagnostic Error Messages	7-22
7.5	TROUBLESHOOTING	7-22
7.5.1	Troubleshooting the Basic VT180.....	7-23
7.5.2	Troubleshooting the VT180 with the Diagnostic Diskette.....	7-23
7.5.2.1	Starting the Diagnostic Diskette	7-24
7.5.2.2	Diagnostic Error Messages	7-24
7.5.3	Troubleshooting the VT180 with no Printout.....	7-24
7.5.4	Troubleshooting the Options	7-29
7.6	VIDEO ALIGNMENT.....	7-30
7.6.1	Alignment Template	7-30
7.6.1.1	Making a Paper Template.....	7-31
7.6.1.2	Attaching the Template	7-31
7.6.2	Monitor Adjustments	7-32
7.6.2.1	Brightness Adjustment	7-32
7.6.2.2	Yoke Adjustment.....	7-32
7.6.2.3	Vertical Height Adjustment	7-33
7.6.2.4	Horizontal Width Adjustment.....	7-33
7.6.2.5	Center Adjustment.....	7-33
7.6.2.6	Vertical Linearity Adjustment	7-33
7.6.2.7	Focus Adjustment	7-34

CONTENTS (Cont)

7.7	MODULE AND MECHANICAL ASSEMBLY REMOVAL AND INSTALLATION	7-34
7.7.1	Cable Access Cover (Wort Cover) and Module Access Cover (Rear Shield).....	7-34
7.7.2	Disk Drive Unit(s).....	7-36
7.7.3	VT18X Control Module.....	7-37
7.7.4	Terminal Controller Module.....	7-37
7.7.5	VT180 Paddle Board.....	7-38
7.7.6	Advanced Video Option (AVO).....	7-38
7.7.7	Terminal Controller Module ROMs.....	7-38
7.7.8	Keyboard Top Cover.....	7-38
7.7.9	Keyboard.....	7-39
7.7.10	Keyboard Cable.....	7-39
7.7.11	Keyboard Speaker.....	7-40
7.7.12	Keycaps.....	7-40
7.7.13	Top Cover.....	7-41
7.7.14	Video Monitor Board (Digital or Elston).....	7-42
7.7.15	Flyback Transformer (Digital or Elston).....	7-43
7.7.16	Bottom Cover Removal and Installation.....	7-43
7.7.17	Power Supply.....	7-43
7.7.18	RF Shield Removal.....	7-45
7.7.19	DC Power Harness.....	7-46
7.7.20	Expansion Backplane Removal.....	7-47
7.7.21	CRT Discharge and Anode Cap.....	7-47
7.7.21.1	CRT Anode Discharge.....	7-47
7.7.21.2	Anode Cap Removal and Installation.....	7-48
7.7.22	CRT and Yoke Assembly.....	7-50
7.7.23	Field Handling of CRTs.....	7-50
7.7.23.1	Replacing a CRT.....	7-51
7.7.23.2	Handling the CRT.....	7-51
7.7.23.3	Storing a CRT.....	7-51
7.7.23.4	Discarding a CRT.....	7-51

APPENDIX A VT180 PROGRAMMING INFORMATION

A.1	GENERAL INFORMATION	A-1
A.2	VT180 KEYBOARD	A-1
A.2.1	LED Indicators.....	A-2
A.2.2	SET-UP Key.....	A-2
A.2.3	Alphabetic Keys.....	A-2
A.2.4	Nonalphabetic Keys.....	A-4
A.2.5	Function Keys.....	A-6
A.2.6	NO SCROLL.....	A-6
A.2.7	BREAK.....	A-6
A.2.8	CTRL (Control).....	A-7
A.2.9	Auto Repeating.....	A-8
A.2.10	Cursor Control Keys.....	A-8
A.2.11	Auxiliary Keypad.....	A-8
A.3	TERMINAL CONTROL COMMANDS	A-10
A.3.1	Control Characters.....	A-10
A.3.2	ANSI Control Sequences.....	A-11

CONTENTS (Cont)

A.3.3	Modes	A-20
A.3.3.1	Digital Private Modes	A-20
A.3.3.2	ANSI Standard Modes	A-20
A.3.3.3	Valid VT52 Mode Control Sequences	A-21
A.4	CONTROL SEQUENCE SUMMARY (ANSI AND VT52)	A-22
A.4.1	ANSI Compatible Mode.....	A-22
A.4.1.1	Character Attributes.....	A-24
A.4.1.2	Erasing	A-24
A.4.1.3	Programmable LEDs	A-24
A.4.1.4	Character Sets (G0 and G1 Designators).....	A-25
A.4.1.5	Scrolling Region.....	A-25
A.4.1.6	Tab Stops.....	A-25
A.4.1.7	Modes.....	A-25
A.4.1.8	Reports	A-26
A.4.1.8	What Are You	A-26
A.4.1.9	Reset	A-27
A.4.1.10	Confidence Tests	A-27
A.4.2	VT52 Compatible Mode	A-27

APPENDIX B VT180 RECOMMENDED SPARES LIST (RSL)

APPENDIX C GLOSSARY OF TERMS AND ABBREVIATIONS

FIGURES

Figure No.	Title	Page
1-1	The VT180 Personal Office Computer	1-2
2-1	VT180 On-Line General Block Diagram.....	2-2
2-2	VT180 Off-Line General Block Diagram	2-2
2-3	VT180 Power Controls	2-3
2-4	VT180 Terminal Keyboard.....	2-4
2-5	Function Keys	2-5
2-6	Set-Up Keys.....	2-7
2-7	Keyboard Indicators.....	2-9
2-8	The VT180 SET-UP Key	2-11
2-9	SET-UP A Display.....	2-12
2-10	SET-UP B Display	2-12
2-11	80- and 132-Column Displays	2-18
2-12	SET-UP B Summary.....	2-19
2-13	Screen Background	2-20
2-14	Answerback Message Display	2-24
3-1	VT180 Unit Dimensions	3-2
3-2	Alternatives for Placement of the Dual Disk Drive Units	3-3
3-3	VT18X Shipping Carton.....	3-4
3-4	VT100 Video Terminal (Rear View).....	3-6
3-5	Advanced Video Option Removal and Installation.....	3-7
3-6	Checking ROM Numbers on the Terminal Controller Module	3-8
3-7	Advanced Video Option with Jumpers.....	3-8
3-8	Advanced Video Option with Switches	3-9
3-9	Installing the VT180 Paddle Board	3-10

FIGURES (Cont)

Figure No.	Title	Page
3-10	Top Cover Removal	3-11
3-11	Removing the Bottom Cover.....	3-12
3-12	Disconnecting the dc Power Harness	3-13
3-13	Remove the Key Plug from the Expansion Backplane.....	3-14
3-14	Installing the Expansion Backplane.....	3-15
3-15	Installing Card Guides	3-15
3-16	Installing the RF Shield	3-16
3-17	Setting the VT18X Control Module Switches.....	3-17
3-18	Installing the VT18X Control Module	3-19
3-19	Removing the VT100 Logo and Installing the VT180 Logo.....	3-20
3-20	Installing the Module Access Cover (Rear Shield)	3-21
3-21	Disk Unit Top Cover Removal	3-22
3-22	Setting the Drive Select Switches.....	3-23
3-23	ROM Installation	3-25
3-24	Terminal Cable Connectors.....	3-26
3-25	RX180 Dual Disk Drive Unit (Rear View).....	3-27
3-26	VT180 Cable Connections with One Disk Drive Unit.....	3-28
3-27	VT180 Cable Connections with Two Disk Drive Units	3-29
3-28	Connecting Devices to the Serial Ports.....	3-30
3-29	Composite Video Output	3-39
4-1	Tracks and Sectors on a Diskette.....	4-2
4-2	Loading the Diskette	4-3
4-3	Main System Menu	4-4
4-4	Start System Display (Drive A).....	4-5
4-5	Directory Display	4-5
4-6	Format/Verify Display.....	4-7
4-7	Copy/Verify Display	4-9
4-8	Reset Display.....	4-10
4-9	Applying a Write-Protect Tab.....	4-11
6-1	VT180 System Block Diagram	6-2
6-2	VT100 Functional Block Diagram	6-5
6-3	VT100 Firmware Block Diagram.....	6-9
6-4	Microprocessor Block Diagram.....	6-11
6-5	Terminal Controller Block Diagram	6-13
6-6	Microprocessor Bus Timing.....	6-15
6-7	8251A PUSART Block Diagram	6-21
6-8	Mode Instruction.....	6-22
6-9	Command Instruction	6-23
6-10	Status Byte Format	6-24
6-11	NVR Block Diagram.....	6-26
6-12	Video Processor Functional Diagram	6-29
6-13	DC011 Timing Chip Block Diagram.....	6-31
6-14	Horizontal Timing	6-34
6-15	Vertical Signals – 60 Hz	6-36
6-16	Vertical Signals – 50 Hz	6-36
6-17	DC012 Control Chip Block Diagram	6-39
6-18	Character Generator ROM Patterns.....	6-45
6-19	DMA Cycle Timing Diagram.....	6-48
6-20	Screen RAM Organization – 80 Column, 60 Hz.....	6-51

FIGURES (Cont)

Figure No.	Title	Page
6-21	VT18X Control Module Block Diagram	6-55
6-22	Z80A CPU Block Diagram.....	6-56
6-23	Microprocessor Interrupt Block Diagram	6-57
6-24	RAM and ROM Block Diagram.....	6-58
6-25	64K Byte Memory Map.....	6-59
6-26	I/O Port Control Block Diagram.....	6-61
6-27	Communications Port Modem Switches.....	6-63
6-28	Terminal Controller and VT18X Control Module Interconnections.....	6-66
6-29	Disk Drive Controller Block Diagram.....	6-68
6-30	MFM Encoding	6-75
6-31	Peak Shift Waveform.....	6-76
6-32	Mode Instruction Format, Asynchronous (41H, 49H, 51H, 59H) WO	6-80
6-33	Mode Instruction Format, Synchronous (59H) WO	6-81
6-34	Command Instruction Format (41H, 49H, 51H, 59H) WO.....	6-82
6-35	Status Read Format (41H, 49H, 51H, 59H) RO	6-83
6-36	Transmit Data Format (40H, 48H, 50H, 58H) WO.....	6-84
6-37	Received Data Format (40H, 48H, 50H, 58H) RO.....	6-85
6-38	Type I Status Register Format	6-90
6-39	Type II Read Sector Status Register Format.....	6-91
6-40	Type II Write Sector Status Register Format	6-92
6-41	General Control and Status Register Format.....	6-94
6-42	Communications Status Register Format.....	6-96
6-43	Communications Control/Baud Rate Select Register Format.....	6-97
6-44	Diagnostic Write Register Format	6-98
6-45	Diagnostic Read Register Format.....	6-99
6-46	Horizontal Deflection Current – T0.....	6-104
6-47	Horizontal Deflection Current – T1.....	6-104
6-48	Horizontal Deflection Current – T2.....	6-105
6-49	Horizontal Deflection Current – T3.....	6-105
6-50	Horizontal Deflection Waveforms.....	6-106
6-51	VT100 Power Supply Block Diagram	6-107
6-52	3524 Regulator Block Diagram.....	6-108
6-53	Power Supply Timing Diagram	6-109
6-54	Keyboard Block Diagram	6-115
6-55	Keyboard Status Byte.....	6-115
6-56	Key Address Transmission Delays.....	6-116
6-57	Keyboard Switch Array.....	6-118
6-58	Keyboard Interface Circuit.....	6-119
6-59	Encoding of Terminal Data and Clock.....	6-121
6-60	Four Keyboard Interface States.....	6-122
6-61	Keyboard Interface Signal	6-122
6-62	Bell Circuit	6-123
6-63	Keys Flag Byte.....	6-123
6-64	Sneak Path	6-125
7-1	VT18X Control Module Jumpers, Switches, LEDs and ROM Locations	7-8
7-2	Video Alignment Template Dimensions.....	7-30
7-3	Making a Paper Alignment Template.....	7-31
7-4	Digital/Elston Video Monitor Board Adjustments.....	7-32

FIGURES (Cont)

Figure No.	Title	Page
7-5	Digital/Elston Monitor CRT Adjustments.....	7-33
7-6	Removal Procedure Sequence	7-35
7-7	Keyboard Disassembly	7-39
7-8	Keycap Removal.....	7-40
7-9	Video Monitor Board Removal.....	7-42
7-10	Power Supply Removal	7-44
7-11	Discharging the Power Supply Capacitors.....	7-45
7-12	RF Shield Removal and Installation	7-46
7-13	Discharging the CRT Anode.....	7-48
7-14	Removing the Anode Cap.....	7-49
7-15	Disposing of the CRT	7-52

TABLES

Table No.	Title	Page
1-1	System Configuration Dimensions.....	1-3
1-2	Physical Specifications of Components	1-4
2-1	Set-Up Feature Types.....	2-13
2-2	Set-Up Features the Host Computer Can Change.....	2-14
3-1	VT100 Series Terminals that Can and Cannot Use the VT18X Option	3-5
3-2	VT18X Control Processor Module Communication Switches.....	3-18
3-3	Communications Interface Connector	3-35
3-4	Printer Interface Connector	3-35
3-5	General Purpose Serial Interface Connector.....	3-36
3-6	RX180 Disk Port Interface Connector.....	3-37
5-1	Serial Port Default Characteristics	5-1
6-1	ROM and RAM Memory Map	6-16
6-2	ROM Chip Select Addressing	6-17
6-3	List of Hex I/O Addresses	6-18
6-4	Interrupt Addresses.....	6-19
6-5	EIA Data and Modem Control Signals.....	6-25
6-6	NVR Control States	6-27
6-7	Video Mode Selection (Write Address = C2H).....	6-32
6-8	Control Chip Commands (Write Address = A2H).....	6-40
6-9	Communication Modem Switch Configuration.....	6-62
6-10	Formatter/Controller Pin Identification	6-70
6-11	WD 1691 Pin Identification.....	6-74
6-12	Disk Drive Interface Connector Signals	6-77
6-13	VT18X Control Module I/O Addresses.....	6-79
6-14	Asynchronous Mode Instruction Bit Description.....	6-80
6-15	Synchronous Mode Instruction Bit Description.....	6-81
6-16	Command Instruction Bit Description.....	6-82
6-17	Status Read Register Bit Description.....	6-83
6-18	Transmit Data and Received Data Bit Description.....	6-85
6-19	Disk Drive Controller Commands.....	6-86
6-20	Required Delays.....	6-86
6-21	Type I Command Bit Description	6-87

TABLES (Cont)

Table No.	Title	Page
6-22	Type I Command Flags	6-87
6-23	Type II Command Bit Description.....	6-88
6-24	Type III Command Bit Description.....	6-88
6-25	Type II and III Command Flags	6-89
6-26	Type IV Command Flags.....	6-89
6-27	Type I Status Register Bit Description.....	6-90
6-28	Type II Read Sector Status Register Bit Description	6-91
6-29	Type II Write Sector Status Register Bit Description	6-92
6-30	General Control and Status Register Bit Description.....	6-95
6-31	Communications Status Register Bit Description.....	6-96
6-32	Communications Control/Baud Rate Select Register Bit Description.....	6-97
6-33	Diagnostic Write Register Bit Description	6-98
6-34	Diagnostic Read Register Bit Description.....	6-99
6-35	VT180 Paddle Board Signals.....	6-100
6-36	Printer Port Signals	6-101
6-37	Keyboard Receiver Signals	6-120
7-1	VT180 Displayed Error Messages	7-2
7-2	LED Error Codes.....	7-4
7-3	Required Settings for Features	7-7
7-4	CP/M Processor Factory Jumper Configuration	7-9
7-5	Diskette Error Messages	7-11
7-6	Basic VT180 Troubleshooting Procedure	7-25
A-1	Set-Up Features and Machine States	A-3
A-2	Alphabetic Key Codes (Octal).....	A-5
A-3	Nonalphabetic Key Codes (Octal)	A-5
A-4	Function Key Codes	A-6
A-5	Control Codes Generated.....	A-7
A-6	Cursor Control Key Codes	A-8
A-7	VT52 Mode Auxiliary Keypad Codes	A-9
A-8	ANSI Mode Auxiliary Keypad Codes.....	A-9
A-9	Control Characters.....	A-10
A-10	DA Control Sequences	A-12
A-11	Load LEDs Parameters	A-14
A-12	DECREQTPARM Sequence Parameters	A-15
A-13	DECTST Test Weights	A-16
A-14	Device Status Report Parameters	A-17
A-15	Erase In Display Parameters	A-17
A-16	Erase In Line Parameters.....	A-17
A-17	Character Set Selection	A-19
A-18	Select Graphic Rendition Parameters	A-19
A-19	Tabulation Clear Parameters.....	A-20
A-20	ANSI Specified Modes.....	A-20
A-21	Digital Private Parameter Functions.....	A-20
A-22	ANSI Standard Modes	A-21
A-23	ANSI Compatible Mode Sequences	A-23
A-24	Line Size Commands.....	A-23
A-25	Character Attribute Parameters.....	A-24
A-26	Erasing Sequences.....	A-24
A-27	LED Parameters	A-24

TABLES (Cont)

Table No.	Title	Page
A-28	Character Set Designations	A-25
A-29	Tab Stop Sequences	A-25
A-30	Mode Sequences	A-25
A-31	Option Present Parameters	A-26
A-32	Test Weights.....	A-27
A-33	VT52 Compatible Mode Sequences.....	A-28
B-1	VT180 Recommended Spares	B-1

PREFACE

This manual contains information needed by a service engineer or technician to install, operate, test, and repair the VT180 to the field replaceable unit level. Included are explanations of the features, options, capabilities, and technical characteristics of the VT180 as well as general reference data. The information is presented in seven chapters and three appendices.

Chapter 1 of this manual contains VT180 specifications and documentation ordering information.

Chapter 2 provides basic operator information, including use of the keyboard, use of set-up modes for setting or changing terminal characteristics, and simple troubleshooting using the audio and visual indicators.

Chapter 3 provides the installation, start-up, and system checkout procedures as well as interface information.

Chapter 4 provides guidance for using the CP/M® operating system.

Chapter 5 describes the procedure for setting the transmission characteristics of the serial ports.

Chapter 6 contains a technical description of the basic VT100 and the VT18X personal computing option.

Chapter 7 provides information needed to service the VT180. This includes module configuration, testing, troubleshooting, adjustments, and removal and installation of module and mechanical assemblies.

Appendix A contains programming information for the VT180 series, including interface timing considerations and descriptions of control functions the VT180 responds to, both in ANSI mode and Digital VT52-compatible mode.

Appendix B provides a recommended spares list.

Appendix C contains a glossary of terms, acronyms, and abbreviations used in this manual.

In the examples of dialog between the operator and the computer, the dialog the operator types is underlined.